 


CLIP top overlay blind corner hinges



CLIP top/CLIP



Features

- 95° opening angle
- 3-dimensional adjustment
- All metal hinge, nickel plated
- Available INSERTA tool free attachment

Cover caps
Mounting plates
BLUMOTION for doors

page 27
pages 43-47
page 73



Minimum Reveal

Minimum reveal table							
0.1	0.3	0.4	0.5	0.9	1.3	3	Cross reference the door thickness and bore distance to assure that doors won't bind when opened.
0.1	0.3	0.4	0.5	0.9	1.3	4	
0.1	0.3	0.4	0.5	0.9	1.3	5	
0.1	0.3	0.4	0.5	0.9	1.2	6	
0.1	0.3	0.4	0.5	0.9	1.2	7	
16	18	19	20	22	24	B	Bore
T Door thickness							

See back cover fold out for more specifications →

Application

Overlay application

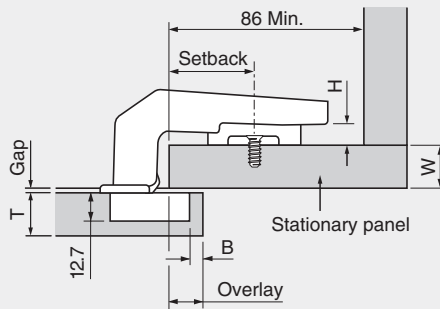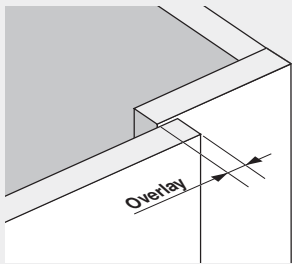

Overlay blind corner hinges


	Self close
Screw on	79T9950.37
Press-in	79T9980.37
INSERTA	79T9990.37

Door Overlay

The door overlay varies depending on the setback position of the mounting plate. Use the table below to select the desired overlay and cross reference to the plate setback and bore distance.

Overlay table							
27	2	3	4	5	6	7	32
32	7	8	9	10	11	12	27
37	12	13	14	15	16	17	22
Plate	3	4	5	6	7	P	A
Setback	B Bore distance					Clearances	

Adjustments and clearances

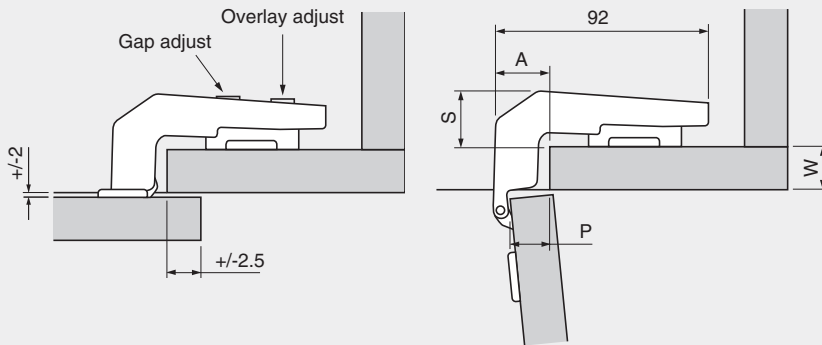

Door Gap

The door gap varies depending on the thickness of the stationary panel and the height of the mounting plate. Using the table below:

1. Select a panel thickness column.
2. Choose a door gap.
3. Cross reference the plate height.

Gap table				
0	7	4	1	21
3	4	1	-	24
6	1	-	-	27
H	16	19	22	S
Plate	W panel thk.			Clearances

Note: Door gap can be adjusted +/-2.